


Pole Tilt 37-52

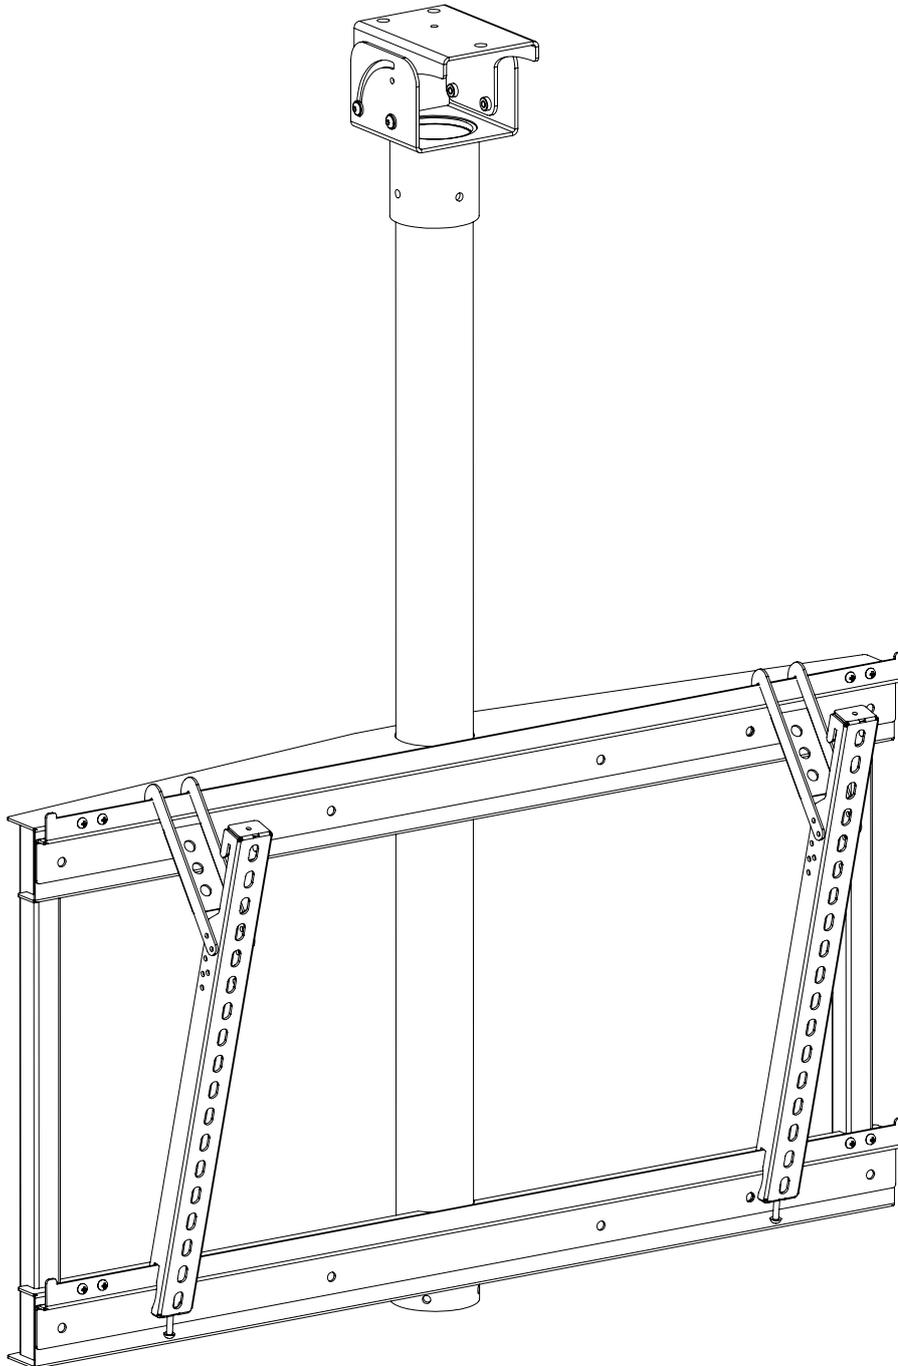

CAUTION

Safety Warning



Mount where people will not be injured:

Select a mounting position where people will not hit their head or other parts of their body.



Risk of Electrocutation:

Do not connect any power to the screen until installation is complete. Attach the screen after the Pole Tilt has been properly installed and tested.



Wear a Hardhat:

During installation this product or parts of it may move in unexpected ways. Wear a hardhat to ensure safety at all times.



Wear Protective Eyewear:

During installation this product or parts of it may move in unexpected ways. Wear protective eyewear to ensure safety at all times.



Be Prepared:

Organise your mounting hardware and have the necessary tools readily accessible before installation.



**Do not expose to extreme temperatures or corrosive materials.
Minimize exposure to the elements.**

This will void your warranty and reduce the life of the product.



This product should only be installed by a qualified technician.

It may be illegal to install this product in your region if you are not a licensed technician . Doing so will also void your warranty.

Table of Contents

Parts List	4
Screw Kit	5
Pole Tilt 37-52 Diagram	6
Pole Tilt 37-52 Screen Mount Diagram	7
Installation	8-9
Specifications	10
Warranty and Returns Policy	11-12

Thank You




Thank you for purchasing this Ultralift product. We are sure you will enjoy this unit for years to come. Before installing, operating or adjusting this product, please read this instruction book carefully and completely.

Parts Checklist


When you receive this product, please do the following to ensure you have all of the needed components included in the package.

- Open the carton & inspect for damage.
- Locate the following parts:
 - 1 — Pole Tilt 37-52 (Screen Mount)
 - 1 — Screw Kit (See Next Page)

Screw Kit: Pole Tilt 37-52


A	<p>M4 Pan Phillips screws (16mm Long) Quantity: 4 For fastening certain Screens to Hanging Rails</p>		<p>5.3 x 20 x 1.25 Washers Quantity: 8 To fasten Screens to Hanging Rails. For use with: C M4x16 Pan Phillips screws (A) - 4 required or M5x16 Pan Phillips screws (B) - 4 required</p> <p>Different Screws (A,B,D,F) are used depending on the screen you have.</p>	
B	<p>M5 Pan Phillips screws (16mm Long) Quantity: 4 For fastening certain Screens to Hanging Rails</p>			
D	<p>M6 Pan Phillips screws (16mm Long) Quantity: 4 For fastening certain Screens to Hanging Rails</p>		<p>E 7.4 x 20 x 1.25 Washers Quantity: 4 For use with M6x16 Pan Phillips screws (D)</p>	
F	<p>M8 Pan Phillips screws (25mm Long) Quantity: 4 For fastening certain Screens to Hanging Rails</p>		<p>G Self Drilling into Metal Countersunk Screws Quantity: 4 To fasten Pole to Pole Sleeve and Pole Ring</p>	
H	<p>H M8 Coach Screw (50mm Long) Quantity: 3 To fasten Top Plate to Timber Ceiling Beams</p>		<p>I M8 Dynabolts (42mm Long) Quantity: 3 To fasten Top Plate to Concrete Ceiling</p>	
J	<p>J M5 Pan Phillips screws (40mm Long) Quantity: 2 To tighten bottom of Hanging Rails</p>		<p>K M5 Pan Phillips screws (20mm Long) Quantity: 2 To tighten top of Hanging Rails</p>	
L	<p>L M4 Pan Phillips screws (40mm Long) Quantity: 4 To lock Tilt Arms at desired angle</p>			

Pole Tilt 37-52 Diagram

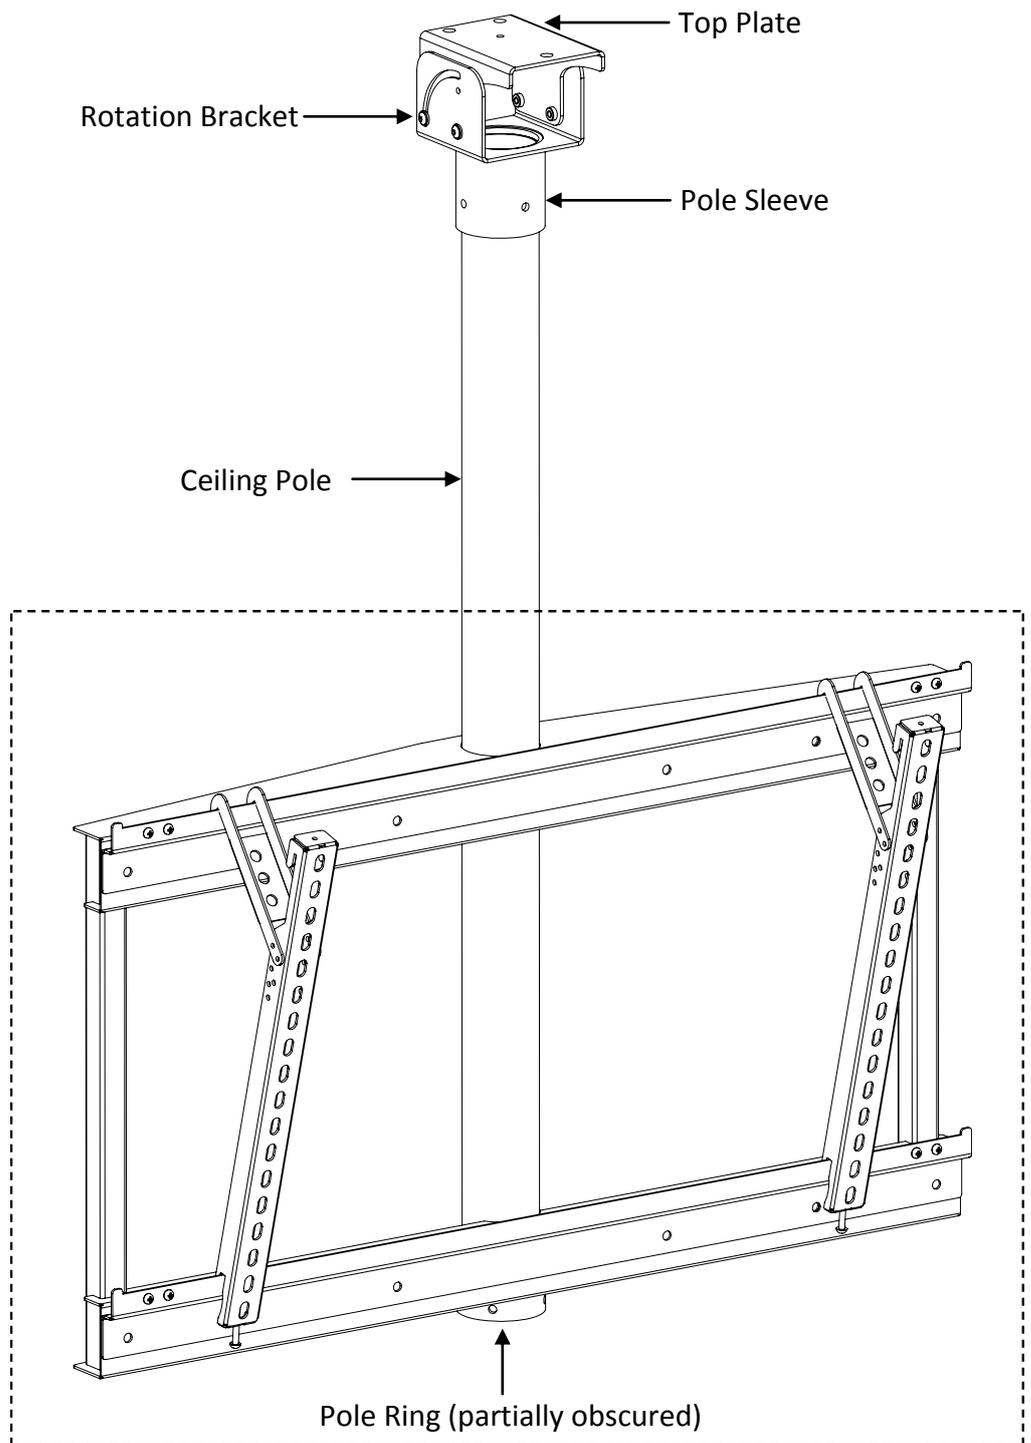

SCREEN MOUNT — SEE OVERLEAF

Pole Tilt 37-52 Screen Mount Diagram

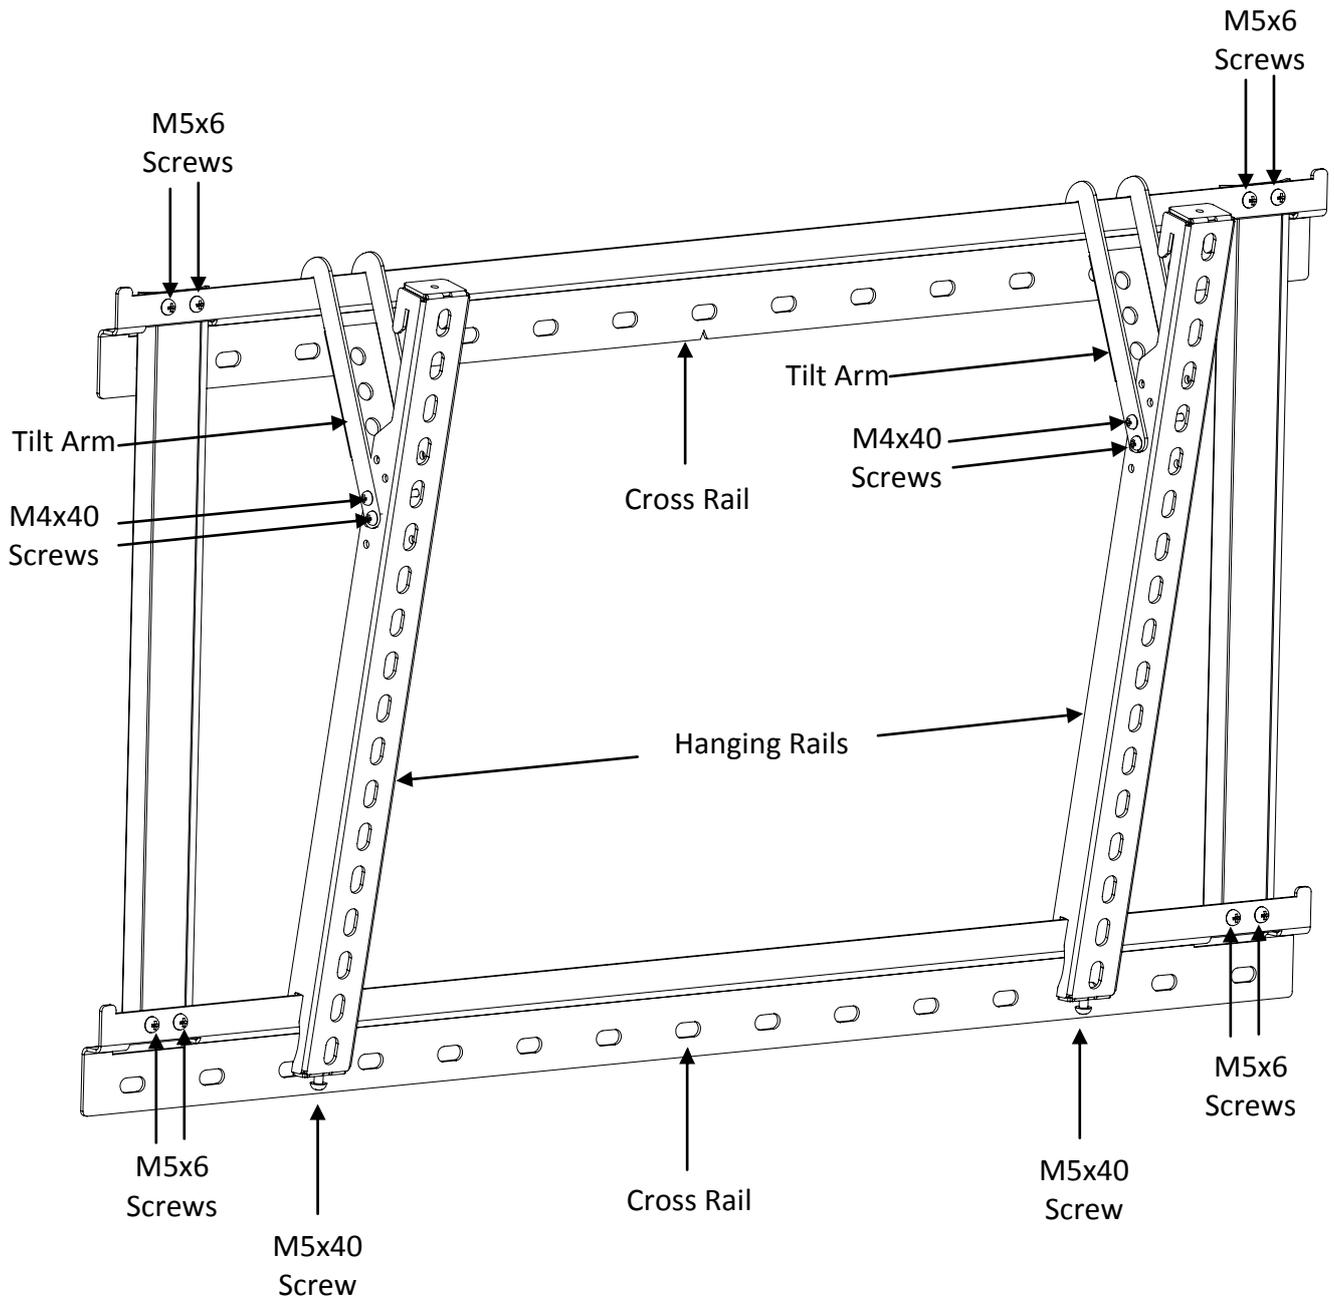


Installation Procedure

1. Determine where the top of the Pole Mount will attach to the ceiling. The ceiling does not have to be flat—if you have an angled ceiling, the Top Plate can be fastened to the ceiling at an angle of up to 90 degrees. If the Top Plate is already attached to the Pole, remove it by loosening any fasteners around the Pole Sleeve.
2. Mark out screw holes on the ceiling using the Top Plate as a template. The holes are located on the rectangular portion of the Top Plate (there are 8 large screw holes — and one small screw hole) You can ignore the small screw hole. Only 3 screws are needed to fasten the Top Plate to the Ceiling, so you won't need to drill into more than 3 of the 8 screw holes you have marked.
3. If you are fastening the Pole Mount to a timber beam, you will need to use the three M8 Coach Screws provided (Screw Kit Part I). If you are fastening it into concrete, use the three M8 Dynabolts provided (Screw Kit Part J).
4. Drill into the ceiling where you have marked the screw holes — only 3 holes are needed in the ceiling to accommodate the 3 Coach Screws or Dynabolts.
5. Fasten the Top Plate to the ceiling using the supplied M8 Coach Screws or Dynabolts.
6. Slide the Ceiling Pole into the Pole Sleeve (which is connected to the Rotation Bracket). Determine if the length of the pole is suitable for your installation. If the pole is too long, remove it from the Pole Sleeve and cut to desired length.
7. Slide the Ceiling Pole into the Pole Sleeve again and mark each of the screw holes present in the Pole Sleeve on the pole. Remove the pole and drill the screw holes as marked into the Ceiling Pole.
8. Fasten the Ceiling Pole to the Pole Sleeve using two of the Countersunk screws. (Screw Kit Part H) The shear nuts on the Pole Sleeve may be tightened too.
9. Once the Pole is fastened to the ceiling, lift the Screen Mount with the large pole-sized hole in it into position, so the pole goes through the pole hole. Fasten the pole into position at the base of the Screen Mount using the Pole Ring and two Countersunk screws (Screw Kit Part H).

Installation Procedure

This unit has three possible tilt configurations: **5°**, **10°** and **15°**.

As every mounting situation is different it may be necessary to try several configurations to determine the most appropriate angle of tilt.

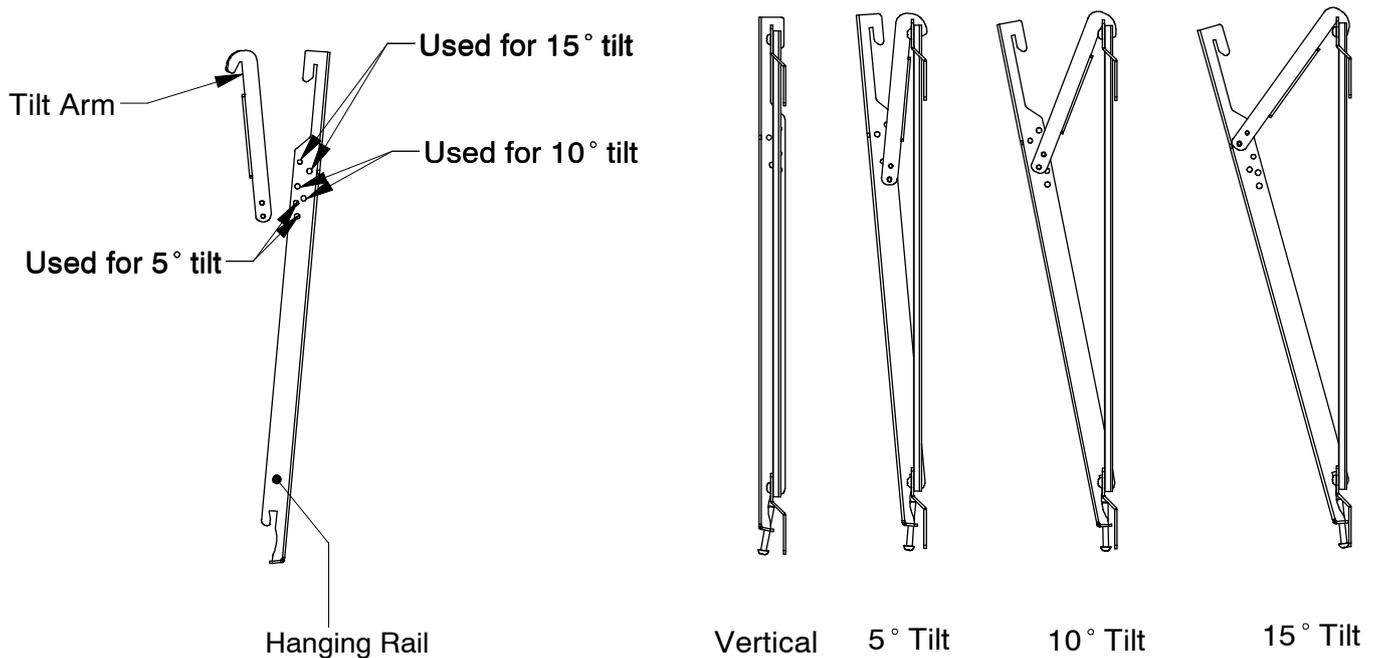


10. To achieve tilt, attach the supplied Tilt Arms to the Hanging Rails using the supplied M4x40 Phillips head screws (4 total). Refer to the diagram above for the appropriate bolt holes to use to achieve the desired tilt.

11. Once the tilt arms are attached, fasten the screen to the Hanging Rails.


12. Place the Screen and Hanging Rails into position by lifting them onto the Cross Rails shown on page 7. The Tilt Arm at the top can be used to hang the screen onto the top rail.

13. Lock the mount into position by fixing the M5x40 screws into the underside of the Hanging Rails..

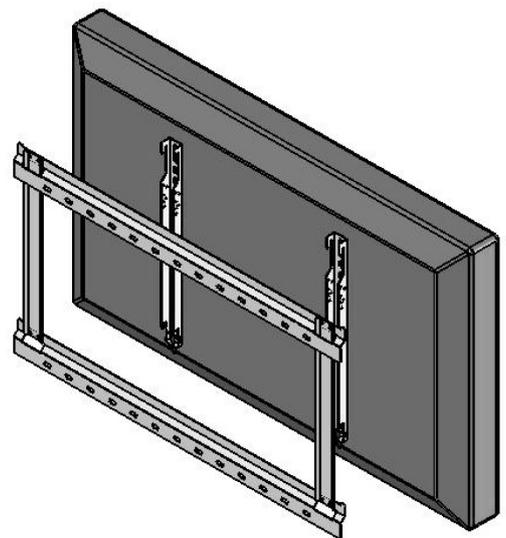

The Hanging Rails are fastened to the rear of the screen.

Schematic Diagram

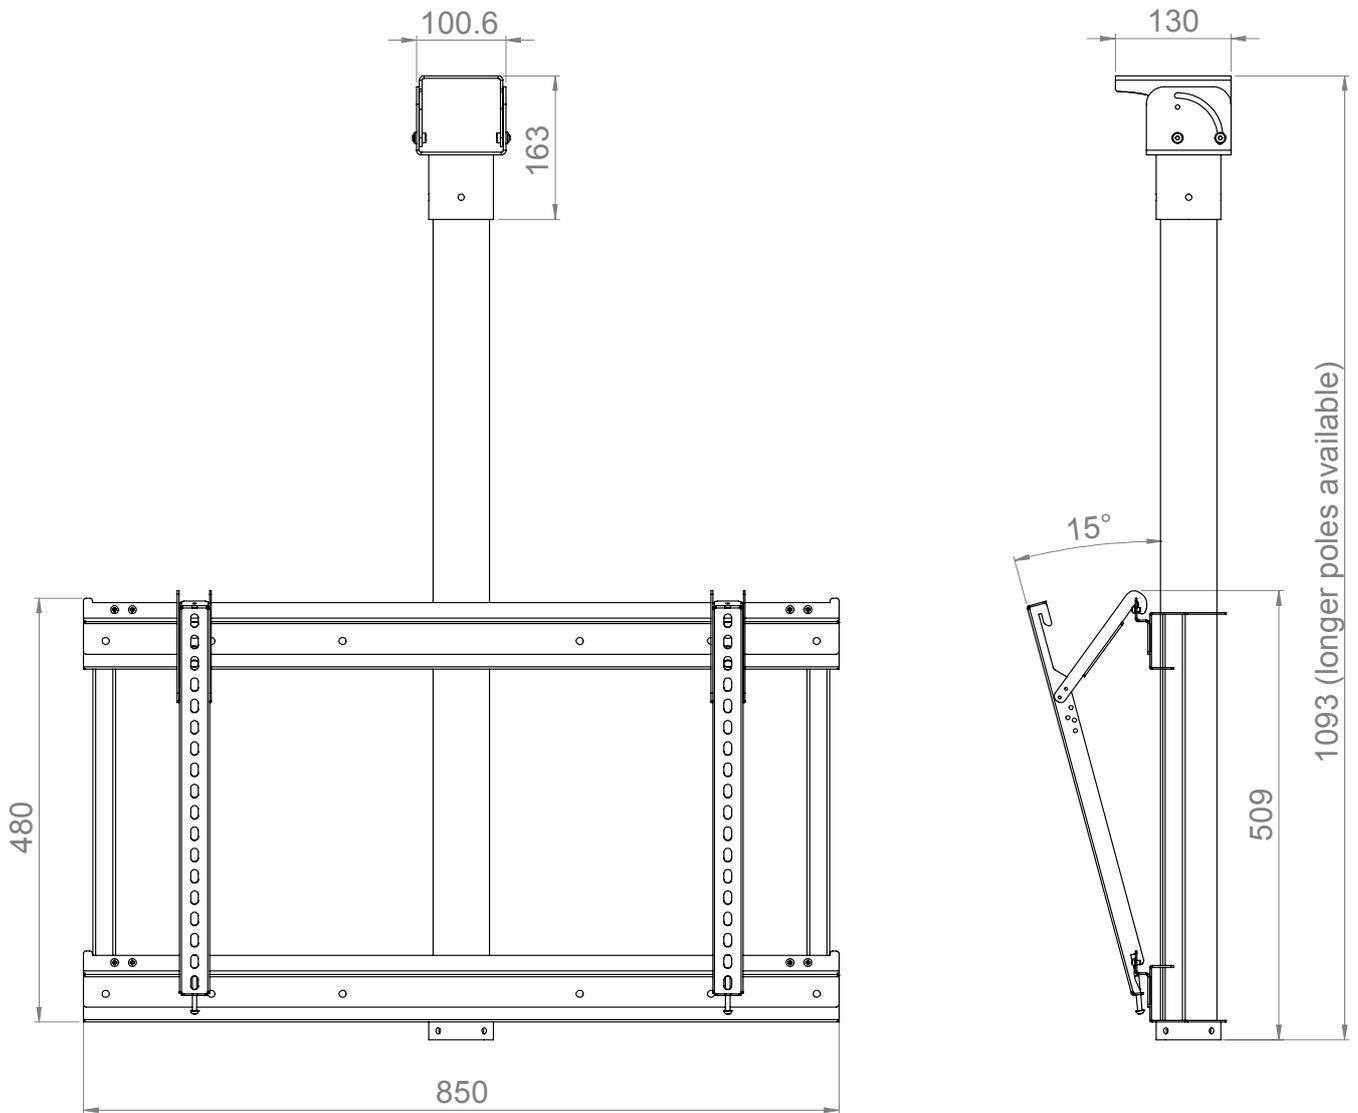

Warranty and Returns Policy

At Ultralift Australia Pty Ltd, we take pride in the fact that our products are of the highest quality. Because of this, we offer the following programs to ensure your satisfaction.

ULTRALIFT 2 YEAR WARRANTY

1. The product is warranted for 24 months from the date of invoice. Subject to the conditions of this warranty, Ultralift Australia or an authorised installer will perform necessary service on the product without charge for parts or labour if, in the opinion of Ultralift Australia, the product is found to be faulty within the warranty period.
2. This warranty only applies to Ultralift Australia products when purchased from Ultralift Australia or from an authorised dealer.
3. This warranty only applies if the product has been installed and used in accordance with the manufacturer's recommendations (as noted in the instruction manual) under normal use and reasonable care (in the opinion of Ultralift Australia). The warranty covers normal domestic, commercial or educational use only. It does not cover damage, malfunction, neglect, build-up of dirt or dust, abuse, maladjustment of customer controls, mains supply problems, thunderstorm activity, infestation by insects or vermin, tampering or repair by unauthorised persons (including unauthorised alterations), exposure to abnormally corrosive conditions or any foreign object or matter having entered the product.
4. If warranty service is required you should:
 - Contact your installer for advice on how to rectify the issue.
 - If this does not solve the problem please call Ultralift Australia on 61 3 9459 0873 for advice.
 - If the device requires service, return the product to Ultralift Australia for repair.
 - **Please Note:** Freight and insurance to and / or from the location of the device must be arranged by you. Please ensure that items returned are packed in an appropriate manner.
5. The warranties hereby conferred do not extend to, and exclude, any costs associated with the installation, de-installation or re-installation of a product. This includes costs related to the mounting, de-mounting or re-mounting of any screen, (and any other ancillary devices), delivery, handling, freighting, transportation or insurance of the product or any part thereof or replacement to such installation, deinstallation, re-installation or transit.

Ultralift Australia Pty Ltd

Email: sales@ultraliftaustralia.com.au

Web: www.ultraliftaustralia.com.au

Phone: 61 3 9459 0873 Fax: 61 3 9457 6686

10 Vernon Ave, Heidelberg Heights VIC 3081 Australia



OUR HASSLE FREE RETURN PROGRAM

Our thirty day return program means you may return your purchase, excluding special orders and/or non stock products, to us should you be dissatisfied with your purchase within thirty days of receipt of the product. You must return the item(s) to us by 2nd day freight, insured for full value, with original packaging, documentation, all manuals and accessories. Freight charges, for delivery and return and related insurance charges, will not be refunded or credited. There will also be a restocking fee of 15% of the purchase price.

CONDITIONS OF RETURNED ITEMS

Do not write on the box. If the box is written on, the returned product will be refused. Be in the original shipping carton with all original packing material. Include all accessories in their original wrapping/packing material. The actual replacement cost for missing items will be deducted from your refund/credit. Include all manuals, warranty information and instructions. The actual replacement cost for missing items will be deducted from your refund/credit.

DEFECTIVE OR D.O.A. PROGRAM

In the case of defective or D.O.A. product(s), no charges will apply. Our Customer Service team must be notified within 30 days of your invoice date if there are any problems with any item(s) upon receipt. Defective or D.O.A. merchandise will be repaired and returned or exchanged for the same make or model.

FOR ITEMS DAMAGED DURING TRANSPORT

Ultralift Australia Pty Ltd endeavours to use reputable carriers, but occasionally shipping damage does occur. Resolving the problem of transit damage or loss depends on the cooperation of all parties. In the event of damage or loss it is imperative that you follow these guidelines:

1. Inspect all shipments upon arrival. If damage or loss is apparent upon delivery, do not accept the goods and do not sign for damaged or missing cartons. If you do accept the goods, keep all packing materials and boxes with the damaged product.
2. Immediately advise Ultralift Australia of all damages or problems with the delivery of goods.

REFUNDS

Established Account:

A full refund will not be issued if the purchaser's account has an open balance. A credit memo will be issued, and credit will be applied first to the invoice on which the products were purchased, then to any other open invoices on the account, beginning with the oldest invoice.

Credit Card / EFT:

All refunds for purchases made by Credit Card/EFT will be issued as a credit to that same account within a reasonable period of time after inspection of returned products.

Cheque:

All refunds for purchases paid by cheque, whether prepaid, C.O.D., or account, will be paid by cheque within a reasonable amount of time, after inspection of returned products.

Ultralift Australia Pty Ltd

Email: sales@ultraliftaustralia.com.au

Web: www.ultraliftaustralia.com.au

Phone: 61 3 9459 0873 **Fax:** 61 3 9457 6686

10 Vernon Ave, Heidelberg Heights VIC 3081 Australia



THANKYOU FOR CHOOSING
**ULTRALIFT
AUSTRALIA**



Ultralift Australia Pty Ltd

10 Vernon Ave, Heidelberg Heights VIC 3081 Australia

Email: sales@ultraliftaustralia.com.au

Web: www.ultraliftaustralia.com.au

Phone: 61 3 9459 0873

Fax: 61 3 9457 6686

Member

